

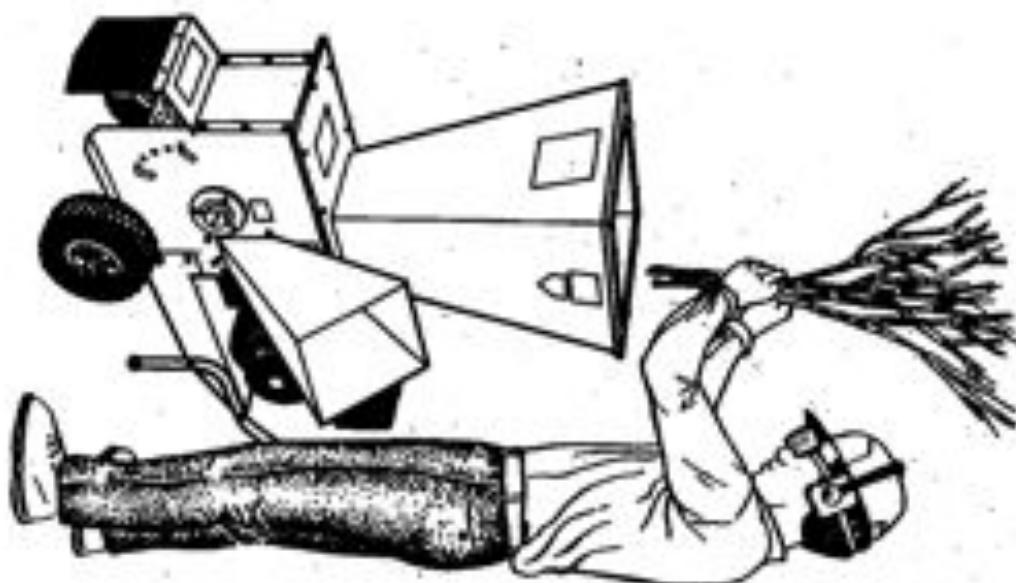


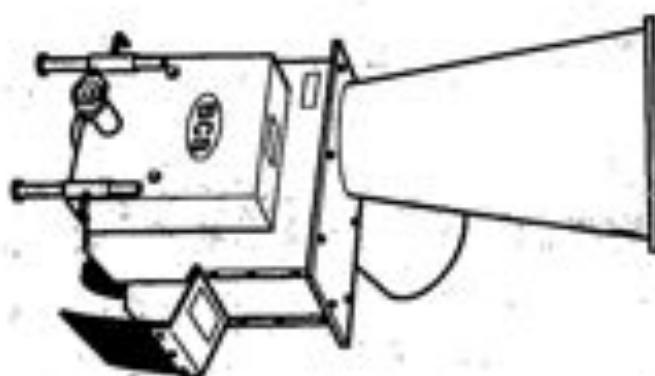

# BCS Chipper/Shredder Owners Manual

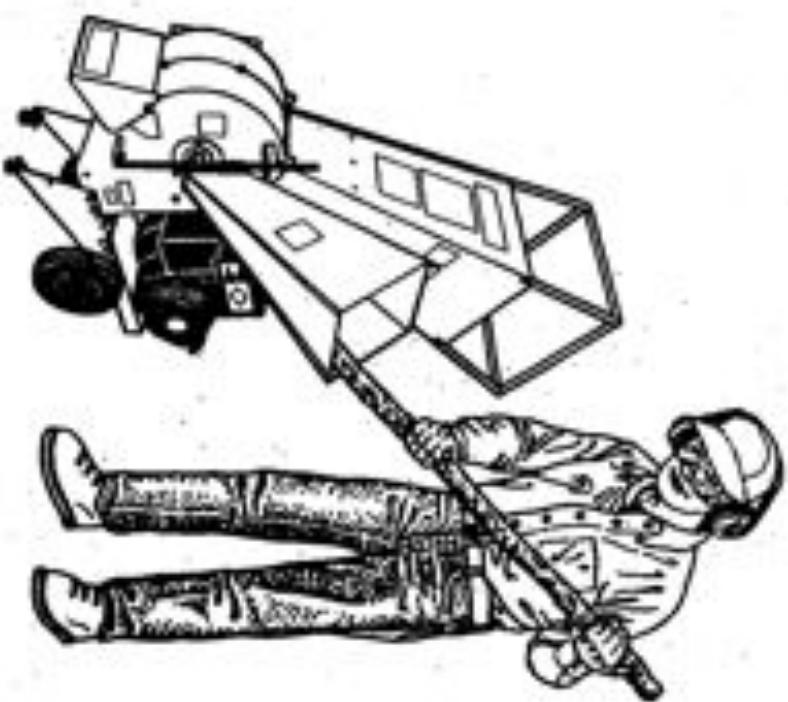

**READ THIS OWNER'S MANUAL BEFORE ATTEMPTING TO  
ASSEMBLE AND OPERATE THE CHIPPER/SHREDDER.**

# GENERAL PRECAUTIONS AND INSTRUCTIONS FOR USE OF CHIPPER/SHREDDER

## TRAINING

READ THIS MANUAL PLUS THE ENGINE MANUAL BEFORE ASSEMBLING AND OPERATING THIS BCS CHIPPER/SHREDDER.

This unit is designed for operation by properly instructed adults only. Make sure that any person operating this equipment has read these manuals.

DO NOT LET CHILDREN OPERATE THE CHIPPER/SHREDDER.

KEEP THE OPERATING AREAS CLEAR OF PEOPLE AND ANIMALS. BE CAREFUL THAT CHILDREN DO NOT COME NEAR.

Do not operate this equipment in enclosed areas. Engine exhaust contains carbon monoxide. Carbon

monoxide is an odorless, deadly poisonous gas.

Do not allow hands to enter the Shredder hopper or the Chipper feed chute when the engine is running or the Chipper/Shredder shaft is rotating. When necessary to put hands and fingers into any opening of the unit, shut down engine, disconnect spark plug wire and wait until all movement stops. Check paint slick on the shaft of model Bio 100 Chipper/Shredder to be sure there is no movement.

When storing unit or leaving it unattended, make the engine unstartable by disconnecting the spark plug wire from the spark plug.

## PREPARATION

The following body protection should be worn during operation of the Chipper/Shredder:

1. Wear snug-fitting clothing that protects body surfaces, and allows freedom of movement without being bulky. Never wear ties, scarfs or jewelry that could be caught in the machine.
2. Wear hearing protection.
3. Wear eye protection goggles stamped "207" (for ANSI Standard Z87.1).
4. When working in strong sunlight, protect your body with clothing and apply a sun block to exposed areas of skin. Wear sunglasses under the safety goggles.

Take the following precautions for the safe storage and handling of gasoline fuel:

1. Keep fuel supplies in approved type, properly labeled fuel containers.
2. Do not store fuels or fueled units in closed (unventilated) areas, or in garages or shops connected to human living quarters. Do not store fuel or fueled units where there are furnaces or sources of sparks such as electrical appliances and switches.

Operate the Chipper/Shredder only on a level surface. Do not operate the unit on paved or gravel surfaces. Before starting, check that all screws, nuts, bolts and other fasteners are properly secured.

## OPERATION

All chute safety covers and hand stops, baffles and feed chutes must be in proper position. Do not operate if any safety devices or fastening parts are missing from the unit.

Before starting make sure that the grinding chamber contains no foreign objects that could interfere with operation or eject from the intake openings at high speed.

Operate only when there is good visibility. Do not operate at dusk or at night.

Do not let hands or any other part of your body, or your clothing, enter either of the Chipper/Shredder intake openings, or go near the discharge opening unless the engine spark plug wire is disconnected and Chipper/Shredder shaft is not rotating.

The zone of operation is anywhere except on the discharge side or in front of the Chipper chute. Do not stand directly in front of the Chipper feed chute. Do not peer down into the Shredder hopper. Materials can be thrown back out of the intakes. Do not go on the discharge side of the unit during operation.

Allow engine to warm up. Then operate at maximum.

## MAINTENANCE AND STORAGE

Clean leaves, debris and fuel off the unit to avoid the possibility of fire.

Keep the unit in good working condition. Clean the unit at regular intervals, and check each time for loose or missing parts.

Do all items of maintenance explained in this Chipper/Shredder Owners Manual. Do not attempt disassembly or repairs not included in instructions from BCS, or the engine manufacturer. Some adjustments and internal servicing of both engine and the BCS Chipper/Shredder should be done by BCS trained service personnel at an authorized BCS servicing dealer or distributor.

Shut down the engine immediately if a foreign object gets into the grinding chamber, or the unit suddenly makes loud noises or vibrates excessively.

throttle speed setting. Never change the engine governor setting or overspeed the engine to gain power.

Side branches should be lopped off to avoid clogging the hopper or chute.

**DISCONNECT THE SPARK PLUG WIRE FROM THE SPARK PLUG TO ENSURE AGAINST ACCIDENTAL STARTING DURING ANY OF THE FOLLOWING OPERATIONS:**

1. Repairs or adjustments to unit or engine.
  2. Before transport or storage, or whenever you are going to leave the unit unattended.
  3. Before removing a foreign object from the unit, or before starting cleaning, inspection or maintenance work.
  4. If the machine starts to vibrate or suddenly run erratically. A poorly running unit should be inspected by an authorized BCS servicing dealer before further use.
- Do not touch the engine when it is running or when surfaces are still hot from operation.


## UNPACKING THE Bio 80

1. Open the top of the carton, and lift out the first piece you see. This is the hand shield that goes onto the Shredder hopper at the top of the unit.
2. Remove the bubble packing and lift out the large Shredder hopper. Remove the Chipper discharge deflector that is inside the hopper.

3. Reach into the carton and pull out the bag containing instructions and some small parts.

4. Set the corners of the carton on the engine side (the side away from the belt cover). Lay the side of the carton down flat. Remove the two wheels, then slide the unit free of the carton.

**IMPORTANT**  
EXAMINE ALL PARTS OF THE UNIT FOR SHIPPING DAMAGE. IF THERE IS DAMAGE, NOTIFY THE SHIPPER.

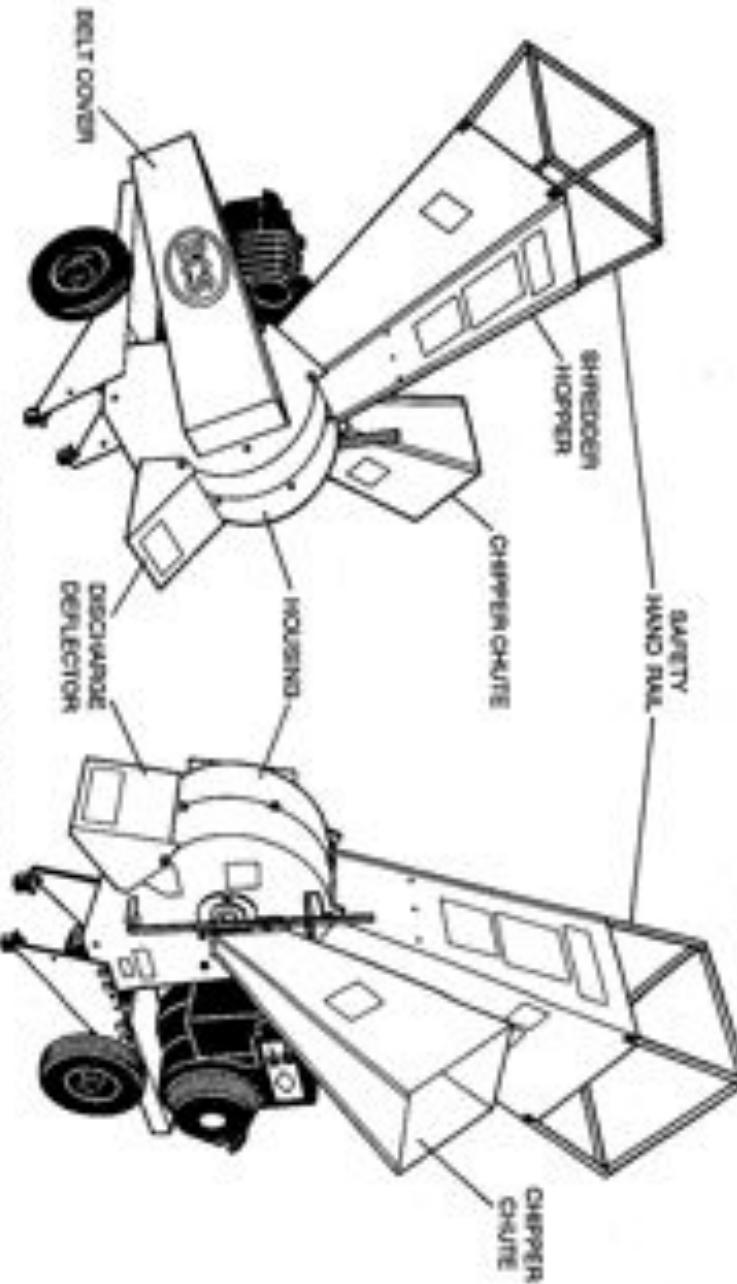

## ASSEMBLING THE Bio 80

1. Mount the two wheels on the axles. Insert the pins (from bag) and turn down their circlips over the wheel hubs.
2. With a #17 metric wrench, remove hex lock nuts and flat washers from upper mounting bolts on the Chipper/Shredder housing. Pull out the long bolts.
3. Position the Shredder hopper onto the housing. The side with the model name and instruction decals goes toward the curved end of the unit housing.
4. Screw the long bolts back through the housing and the hopper. Secure with the flat washers and nuts that were removed in step 2.
5. With a #10 wrench, install the safety hand rail to the top of the hopper with four M8 x 16mm bolts and hex lock nuts.
6. With a #13 wrench, remove the two hex lock nuts.

and flat washers from the mounting studs, and mount the Chipper intake chute to the housing with these fasteners.

7. The position of the discharge deflector on the Chipper/Shredder housing must be adjusted before first use. Loosen the hex lock nuts on each side with a #13 wrench. Raise and lock the deflector in a position where discharge can occur only below the deflector.

### NOTE

Position of deflector may be adjusted to direct the discharge as desired. But do not adjust so low that unit discharges above the deflector.


8. With a #13 wrench, use flat washers and hex-locknuts to secure the two rubber feet to the frame.

## UNPACKING THE Bio 100

1. Cut the strapping and lift the top and sides of the box off the wooden skid base.
2. Remove the wheels.
3. Remove and strip the Shredder hopper off its packing material. Take two hexbolts, a bag of parts, an instructions package and the wheel axle from the hopper.
4. Remove the package containing three rods and hairpins and five tubes. These parts are for optional use.

5. Free the unit from the wooden skids by pulling out the two nails.

**IMPORTANT**  
BEFORE ASSEMBLING THE UNIT, CHECK THE CONTENTS. NOTIFY THE SHIPPER OR DEALER IF THERE ARE ANY MISSING OR DAMAGED PARTS.

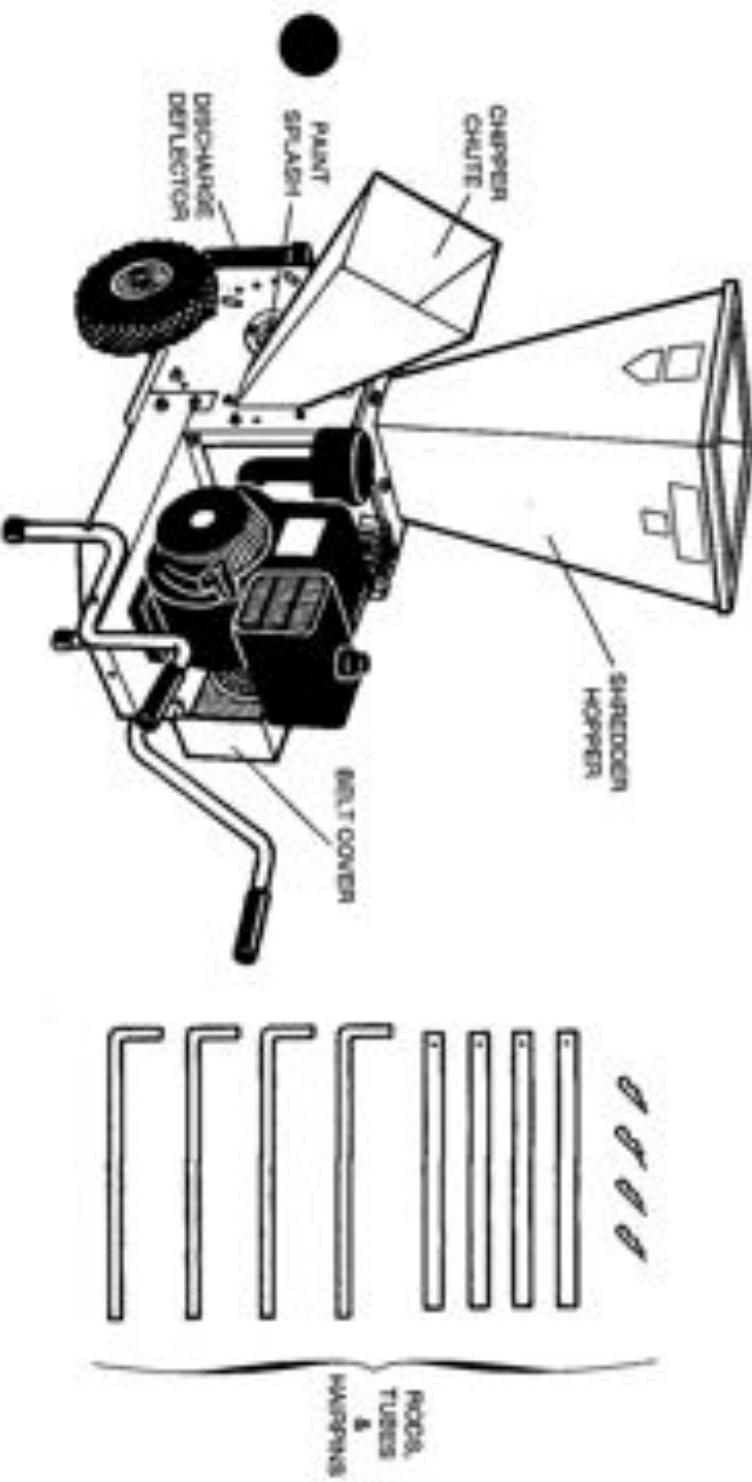

## ASSEMBLING THE Bio 100


1. Block up front of unit off the wooden skids. Slide the axle under the base and hold in position with the studs of axle protruding through the four holes in the base. Start a flat washer and M8 hex-lock nut onto each stud. Tighten all four nuts with a #13 wrench.
2. Slide the wheels partly onto the axles. Then remove the blocking. Pick up the engine end and walk the unit clear of the skid base. Using large hairpins (from parts bag) on both sides of each wheel, pin the wheels in position.
3. Block up the engine end for attachment of the handle bars at threaded holes on each side of the base. With a #13 wrench, install M8 flat washers and hex-lock nuts at the four holes. Tap the rubber grip onto the handlebar ends.
4. Mount the Shredder hopper onto the unit. Slip a flat washer onto each of eight M8 x 20mm bolts. Drop the bolts through the eight holes in the hopper. Secure with a flat washer and M8 hex-lock nut on each bolt.
5. Mount the Chipper chute on the three studs surrounding the intake, on side of unit, and secure with flat washers and M8 hex-lock nuts.

# CHIPPER/SHREDDER OPERATION

## SETTING UP FOR OPERATION


Material can be thrown out from both feed and discharge openings.

1. Wear safety goggles and a hat.
2. Do not look into shredder hopper or place your head over it when the unit is running.
3. Do not go on the discharge side of the unit or directly in front of the Chipper chute.

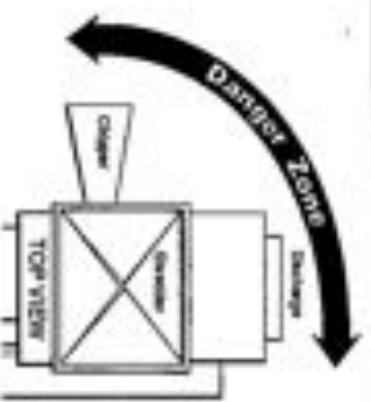

2. Inspect the hopper before starting the engine. On the model Bio 80, pull the starter rope very slowly to see if the engine and Chipper/Shredder turn over freely. On the model Bio 100, reach under the belt cover, grasp and pull belt to the left and right to see if the Chipper/Shredder shaft is free to turn.

**WARNING**  
Inspect what you plan to feed into the hopper. Remove glass, metal, brick, stones, long or thick branches, or anything else that could damage the machine or fly out at high speed.

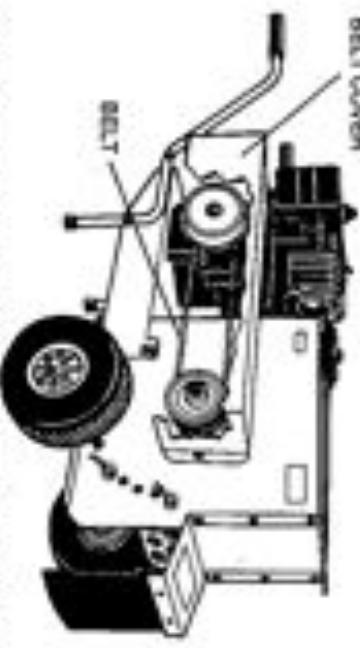

## CHIPPING WOOD

**DANGER**  
**DO NOT PUT HANDS DOWN INTO THE CHUTE WHEN THE UNIT IS RUNNING.**

1. Wood in diameter up to 2-1/2" for the Bio 80 and 3-3/4" for the Bio 100 can be fed through the Chipper chute.
2. Put the thickest end of the branch into the chute. Side branches must be either bent to fit or looped off. Find just the right feed pressure to apply not too much! Do not let the chipper overfeed itself. Pull back when engine bogs down and wait for speed to resume before feeding wood. On the Bio 100 unit, the engine must maintain high speed under load to keep the centrifugal clutch safely engaged. Proper feed pressure and engine speed are important for the life of both models.




**WARNING**  
Do not go on the discharge side of the unit or stand directly in front of the intake chute when feeding the Chipper. Keep to one side of the chute.

3. NEITHER PULL OUT NOR PUSH like the short end pieces with your hands. Use the next log or branch to lead the short end through the Chipper each

## SHREDDING

1. Be very careful what you put into the hopper. The shredder cannot handle cloth, string, plastics, glass, rubber, rocks or paving, brick, large wood chunks, metal, thick branches and long vines. Any material more than two centimeters (about 3/4") thick can jam the Shredder.
2. Soggy soil, green garden wastes and wet grass clippings may require mixing in with some dry wood chips or leaves to avoid clogging the Shredder.
3. Preparation of the material may help in feeding it through the hopper. Cutting side branches off stems, for example, helps the mass of material slide down the hopper walls. Adding too much material at a time can clog the works. Throwing

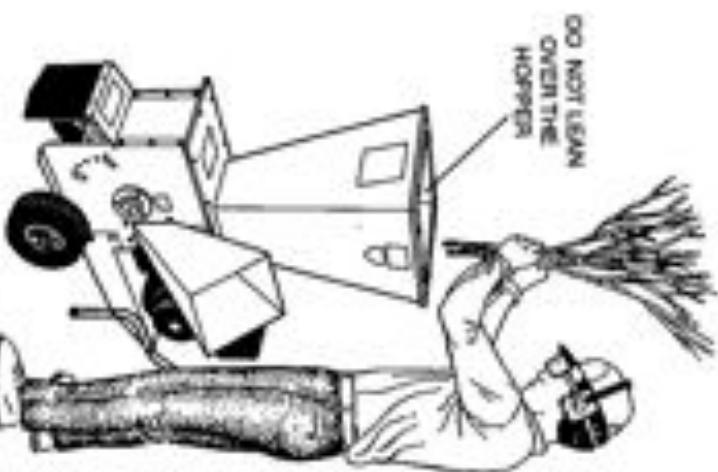

### DANGER


Shredder grasps and pulls material down into hopper with surprising speed. Do not wear rings, bracelets, jewelry, watches or any other items that could be caught in the material and draw your hands into the shredder. Hold the material very lightly. Do not use a hard throwing or spearing force. Gloves, when worn for shredding, should be large enough to slip off your hands if caught in the material.

time. Short ends sometimes feed themselves overloads the fans (knife blades) and jams the shredder. Roots and tubes can replace the curved "swiss cheese" screen on model Bio 100 for improved shredding of wet materials or finer chips (see "Changing Screen on Bio 100").

### WARNING

Always shut down the engine and wait until all movement stops before clearing the hopper or discharge screen, and before removing the hopper to remove a blockage.

4. To clear Bio 80 discharge: Shut down the unit and disconnect the spark plug wire. Free up and move the screen latch lever forward to open the discharge screen. Clear out material with wooden tool handle or brush. Do not reach inside with fingers because the fans (knife blades) are very sharp. Pull the starter rope to test whether the shafts turn freely. If so, latch screen with the lever and connect the wire to the spark plug.


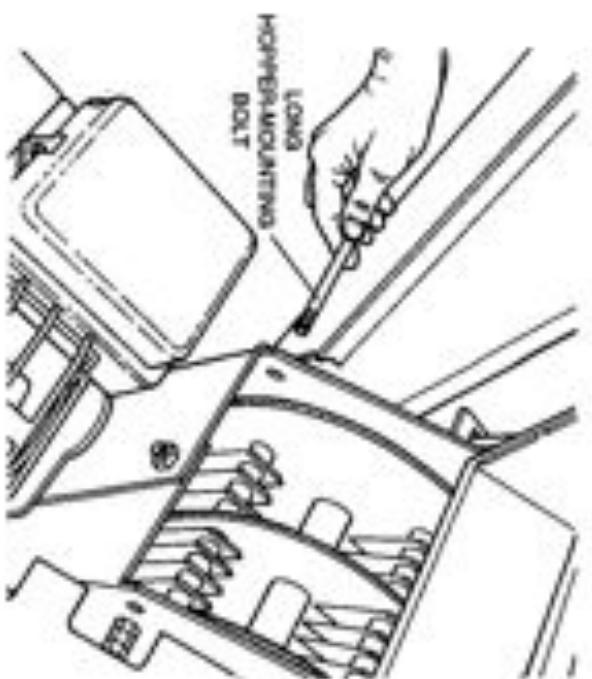


5. To clear Bio 80 blockage: Shut down the unit and disconnect the spark plug wire. Remove the nut and flat washer stud on the right side of the Chipper chute. Loosen the other stud nut. Remove the lock nut and flat washer from the long hopper-mounting bolt nearest the engine. Pivot the hopper toward for access to the grinding chamber. Release lever

## CHANGING SCREEN ON Bio 100

### WARNING

On the centrifugal clutch-equipped Bio 100 the Chipper/Shredder shaft may continue to rotate silently after engine shut-down. After shutting down engine, check the paint slash on the end of the Chipper/Shredder shaft. Be sure the shaft has stopped rotating before you work on the unit.

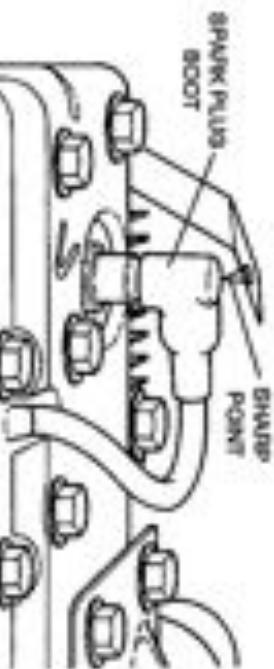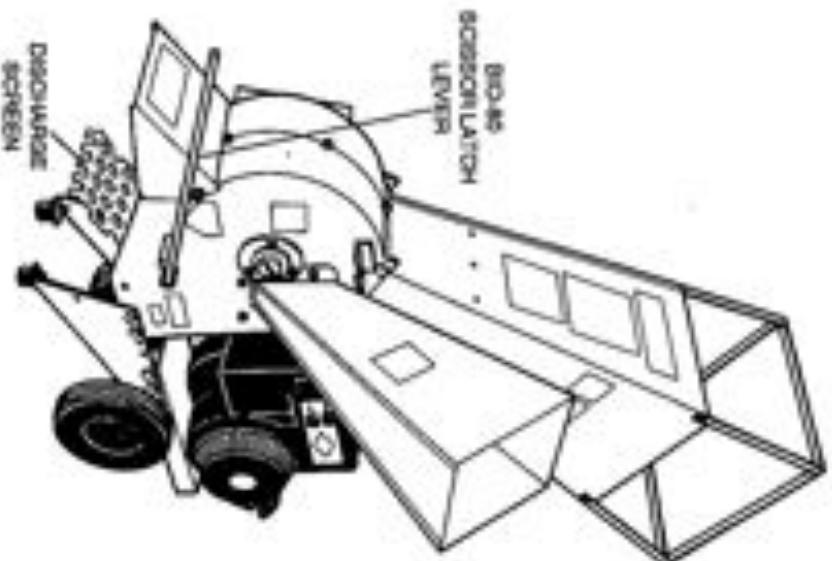


### DISCHARGE SCREEN

to open the discharge screen (see previous paragraph). Wear heavy work gloves while clearing the blockage. Check that the engine and Chipper shafts turn freely before you reassemble hopper and chute to the unit and connect the spark plug wire.

### IMPORTANT

THIS DISASSEMBLY ROUTINE SHOULD BE FOLLOWED TO REMOVE THE SCREEN EITHER FOR CLEARING OUT DEBRIS OR REPLACEMENT WITH RODS AND TUBES.

1. Shut off engine, disconnect spark plug wire and wait for unit rotation to stop before doing this next.
2. Remove the belt cover, held in two places by M8 bolts, tie washers and hex nuts.

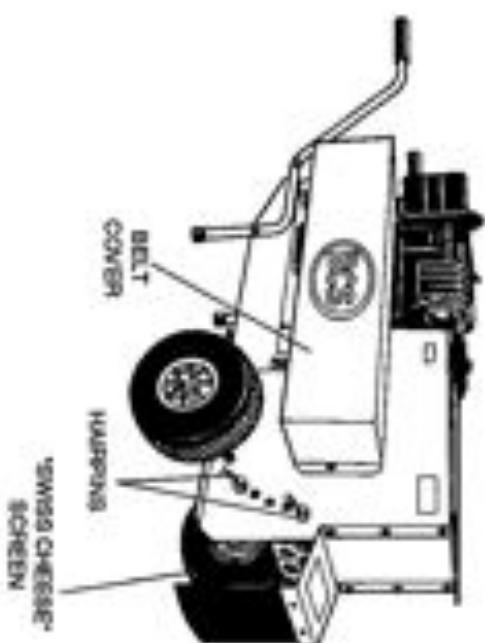

### IMPORTANT

ANY TIME THE CHIPPER/SHREDDER AND ENGINE SEEM TO BOG DOWN, SHUT DOWN THE UNIT, AND CLEAR THE GRINDING CHAMBER, PER ABOVE INSTRUCTIONS. OR SEE "TROUBLESHOOTING" ON PAGE 9 FOR POSSIBLE CAUSES AND REMEDIES.


6. To clear Bio 100 discharge screen or internal blockage: These procedures require temporary removal of the belt cover and the discharge screen.


Removal of the hopper may be required to remove internal blockage. Removal of objects between the Chipper hopper and the rotating member, requires removing the hopper assembly, held by eight sets of M8 x 20 bolts, lock washers and hex nuts.

- Lock at the series of six holes on the chute side of the unit. Two of these holes have long rods running through the curved discharge screen to the back of the unit. Remove the hairpin and slide out the rods. The curved screen will be replaced by five sets of rods and tubes in the next step.
- The bottom hole of the series of six will not be used. Start one rod into the top position hole. Slip a tube onto the rod and push the rod through the hole on the rear side (see figure at right). Lock in place with a hairpin. Install the four other rods and tubes in the same manner, leaving the bottom hole empty.

**DANGER**  
Do not use this Chipper/Shredder with the discharge left unscreened. Discharge must be covered either with the rods and tubes or the standard screen.

## MAINTENANCE, ADJUSTMENT AND TROUBLESHOOTING

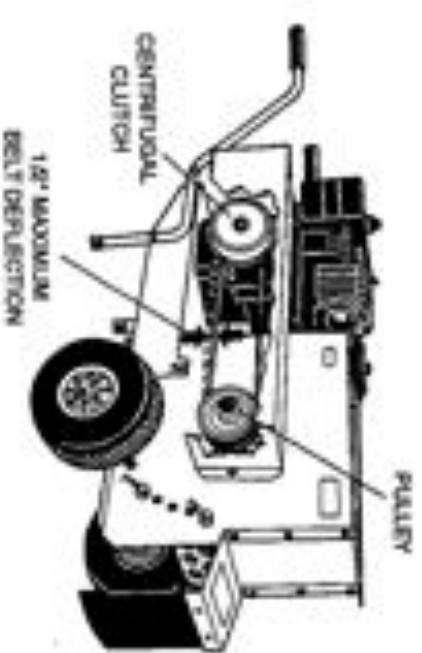- WARNING**  
Shut off engine. Wait for the unit to stop. Then remove the spark plug wire from the spark plug before working on the unit.  
Do not bring fuel or a fueled engine near flame or sparks.
- Wipe exterior of the unit clean after each use. Check for loose or missing parts.
  - Clean out the hopper and the discharge screen before next use.
  - Do not remove the spark plug until there is trouble starting the engine. Try starting with a new, properly gapped plug.
  - If a new spark plug does not good, drain fuel tank and safely dispose of fuel that may not be fresh. Fill tank with fresh gasoline and try starting engine.
  - If a Chipper/Shredder output [volume] drops off while engine runs at working speed, check tension of the drive belt. Belt should be taught enough not to slip, but not so tight as to fray. To increase belt tension: loosen the four engine mounting bolts; pull engine back on the mount to increase tension and tighten the bolts.
7. On the Bio 100 only: If tightening the belt tension does not restore proper Chipper/Shredder volume, the centrifugal clutch may be worn and slipping. Have this checked by your BCS servicing dealer or authorized distributor. Do not disassemble the unit and sharpen or replace the knives.
8. Do not keep fuel in the unit for a longer than one month. Before storing the unit, disconnect the fuel line at the carburetor inlet and drain the fuel into an approved fuel container. Reconnect the fuel line start and run engine until it stops from lack of fuel. Dispose of the gasoline safely. Store unit in a well-ventilated place, protected from dampness and the weather.
- 
- 1/2" MAXIMUM  
BELT DEFLECTION

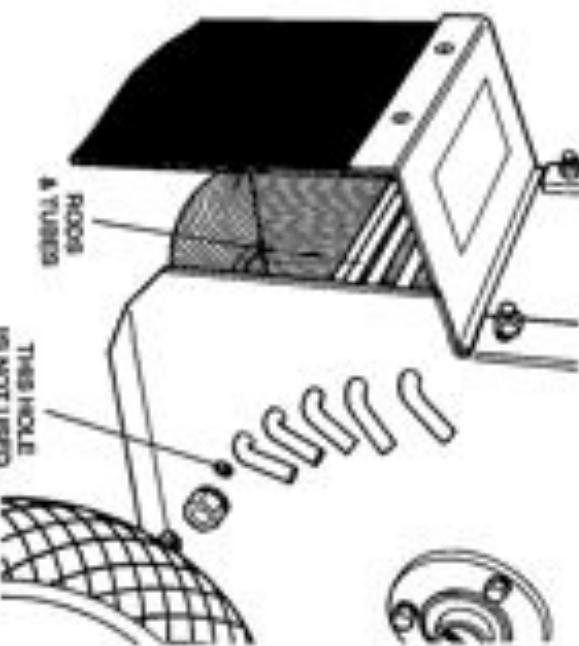

# USE AND CARE OF CHIPPER/SHREDDER

Be sure to read the BCS Chipper/Shredder Owner's Manual which comes with the attachment, and also obey the safety messages printed on the unit and the Chipper/Shredder attachment.

This unit reduces thick branches to chips, and pulverizes lawn and garden waste for mulching or adding to your compost pile. Careless or improper use can be very dangerous.


Wear safety goggles of the type specified by ANSI Safety Standard Z87. Also wear a hat.

Work gloves may be worn when feeding the Chipper, but not when feeding the Shredder, because they can pull your hands into the hopper if snagged by the material.

Remove jewelry or clothing articles which could be drawn into the machine.

Set up on firm ground, but not on gravel, concrete, brick or other surfaces which provide no cushion.

**DANGER**  
Do not start engine when there is material in the Shredder. Shut off engine and disconnect the spark plug wire before cleaning a jammed hopper, changing screens or performing any maintenance or service.

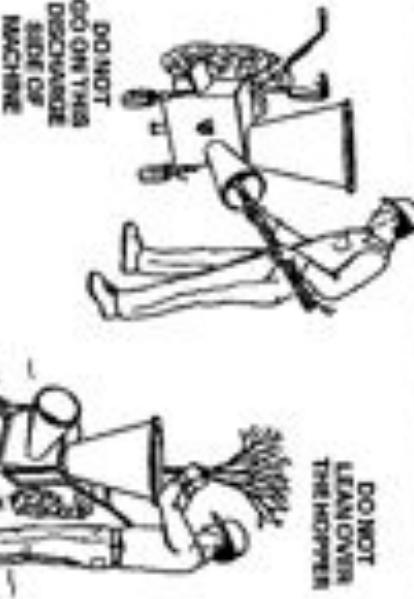

Soggy soil, green garden wastes and wet grass clippings can be processed through the Shredder by mixing dry leaves and wood chips with the wet stuff.

For wet processing, the standard curved screen with the "Spiral chevron" holes should be replaced with the set of five rods and tubes supplied with the attachment.

**DANGER**  
Do not use the Chipper/Shredder with an unscreened discharge. The discharge must be covered either with the rods and tubes or the standard screen.

## IMPORTANT

Always disengage the PTO lever before stopping the engine. If the PTO remains in engagement during engine shutdown, the rotating Chipper/Shredder shaft may motorize and restart the engine.

After shutdown, always check the point splash across the drive shaft (near Chipper chute) to be sure all movement has stopped.

## CHIPPER/SHREDDER MAINTENANCE

1. Clean out the hopper before each use.
2. Clean the exterior at regular intervals, and apply a light oil or wax to prevent rust.
3. Shaft bearings are the sealed, self-lubricating type requiring no further lubrication.
4. Check fasteners frequently and tighten loose parts.

Replace missing or worn parts. See the Illustrated parts list in your Chipper/Shredder owner's manual for parts information.

# WARRANTY INFORMATION

## Limited Warranty

### PERIOD OF WARRANTY COVERAGE

#### Personal, Family, or Household

The BCS No-Time-Limit Warranty is available on units sold from Sept 1992 and beyond to the original owner. The BCS No-Time-Limit Warranty applies to all transmission components. This will include all components located inside the transmission housing excluding the clutch assembly and PTO coupling.

BCS Chipper/Shredders and all remaining parts on BCS tractors and attachments are warranted for a period of three (3) years from the date of purchase.

All engines (Aureo, Honda, Kohler, Briggs & Stratton, and Lombardini) are covered by a separate warranty issued by the individual engine manufacturers. Please refer to the engine warranty for details.

#### Commercial, Professional, and Rental Use

BCS tractors and attachments are warranted for a period of one (1) year from the date of purchase.

All engines (Aureo, Honda, Kohler, Briggs & Stratton and Lombardini) are covered by a separate warranty issued by the individual engine manufacturers. Please refer to the engine warranty for details.

## WARRANTY SERVICE

For warranty service, return the defective BCS product together with proof of date of purchase and the serial number of your BCS product to an authorized BCS servicing dealer or BCS factory recommended service station. Transportation of your BCS product to and from the place where warranty service is performed shall be at your expense and risk.

See the yellow pages or call (800) 543-1060 for the name and address of the BCS servicing dealer or service station near you. You may also obtain warranty information by writing:

BCS America LLC,  
8111 NE Columbia Blvd.,  
Portland, OR 97218

## WARRANTY COVERAGE, CONDITIONS, EXCLUSIONS, AND LIMITATIONS

BCS agrees to cover the cost of parts and a specified labor for any repair from a failure that was caused in the judgment of BCS to be a defect in materials or workmanship.

This warranty is given to the first retail purchaser (other than for purposes of resale) only and is not transferable. This warranty does not cover damage resulting from other than defects in material or workmanship, or damage caused by unreasonable use including the failure to provide reasonable and necessary maintenance as prescribed in your BCS owner's manual.

This warranty does not cover tune-ups or replacement on non-defective parts that may wear out with reasonable use within the warranty period which may require replacement in connection with normal maintenance, such as, by way of example, tiller tines, lawn mower blades, clutches, and control cables.

In addition, this warranty does not cover repairs performed due to neglect, abuse or use of the equipment other than the application it is designed for.

This warranty is void if the serial number of your BCS machine is removed or defaced or if service for defects covered under this warranty is performed by other than an Authorized BCS Servicing Dealer or BCS Factory Recommended Service Station.

This warranty applies only to BCS machines sold within the United States of America and Canada.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURCHASE, MERCHANTABILITY, OR OTHERWISE, APPLICABLE TO THIS PRODUCT, SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY. BCS SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON LOST GOODWILL, LOST PROFITS, WORK STOPPAGE, IMPAIRMENT OF OTHER GOODS OR OTHERWISE.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG ANY IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

This warranty supersedes any other warranty on your BCS machine, including any warranty contained in your owner's manual.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This warranty is given by BCS America LLC., 8111 NE Columbia Blvd., Portland, OR 97218  
Phone: (800) 543-1040


**Engine Driven  
Chipper Shredder**

Génération I - SHP  
Bio 80 Square Hopper

**Serial Number Range**

01.0

ID	PART NO	QTY	DESCRIPTION	ID	PART NO	QTY	DESCRIPTION
1	311.12560		SCREW M5X16	26	581.58212		SUPPORTS
2	311.12154		SCREW M5X20	27	581.58213		ROD
3	311.12218		SCREW M10X25	28	581.58214		SCREEN
4	312.11160		NUT M10	29	581.58215		GRANOCASE
5	312.41960		NUT, SELF LOCKING M6	30	581.58216		PULLEY
6	312.41980		NUT, SELF LOCKING M8	31	581.58217		BELT A49
7	312.41100		NUT, SELF LOCKING M10	32	581.58218		PULLEY
8	580.00952		PIN	33	581.58219		PLATE
9	581.27424		STATIONARY BLADE	34	581.58220		ANGLE BAR
10	581.27482		RIVET 4.8X16	35	581.58221		SHM
11	581.27433		COUNTER SUNK (BOLT, M8X25)	36	581.58222		RUBBER FOOT
12	581.27484		WASHER	37	581.58223		WHEELS
13	581.27491		WASHER	38	581.58224		FLAP
14	581.58200		FRAME	39	581.58225		FLAP
15	581.58201		ENGINE SUPPORT	40	581.58226		SPACER
16	581.58202		CHOPPER CRUTL	41	581.58227		SPACER
17	581.58203		HOPPER	42	581.58228		SPACER
18	581.58204		RIGHT SIDE WALL	43	581.58229		SPACER
19	581.58205		LEFT SIDE WALL	44	581.58230		SPACER
20	581.58206		FLAP	45	581.58232		SPACER
21	581.58207		FLYWHEEL PROTECTION	46	581.58233		SCREW M6X20
22	581.58208		KNOVES	47	581.58234		SCREW M10X20
23	581.58209		BLADE	48	581.58235		SCREW M10X15
24	581.58210		SCREEN LEVER	49	581.58236		SCREW M10X16
25	581.58211			50	581.58237		FLATWASHER

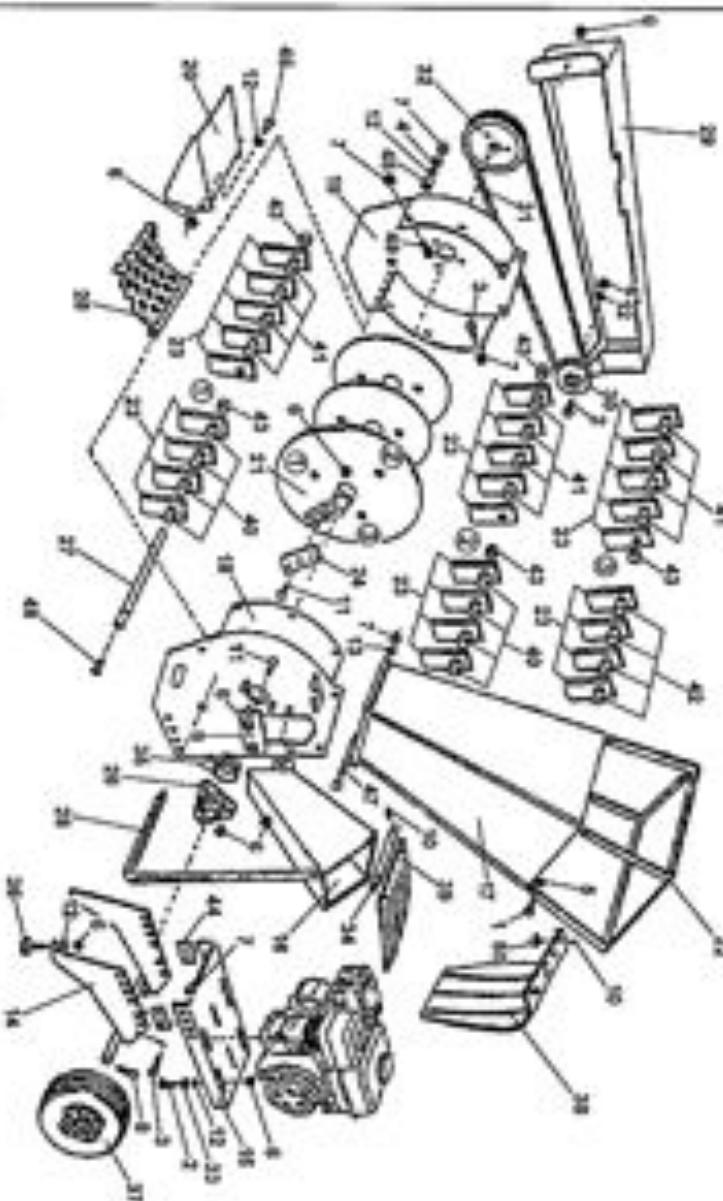


Engine Driven  
Chipper Shredder

**Generation I - 8HP  
Bio 100 Round Hopper**

Serial Number Range

**03.00**

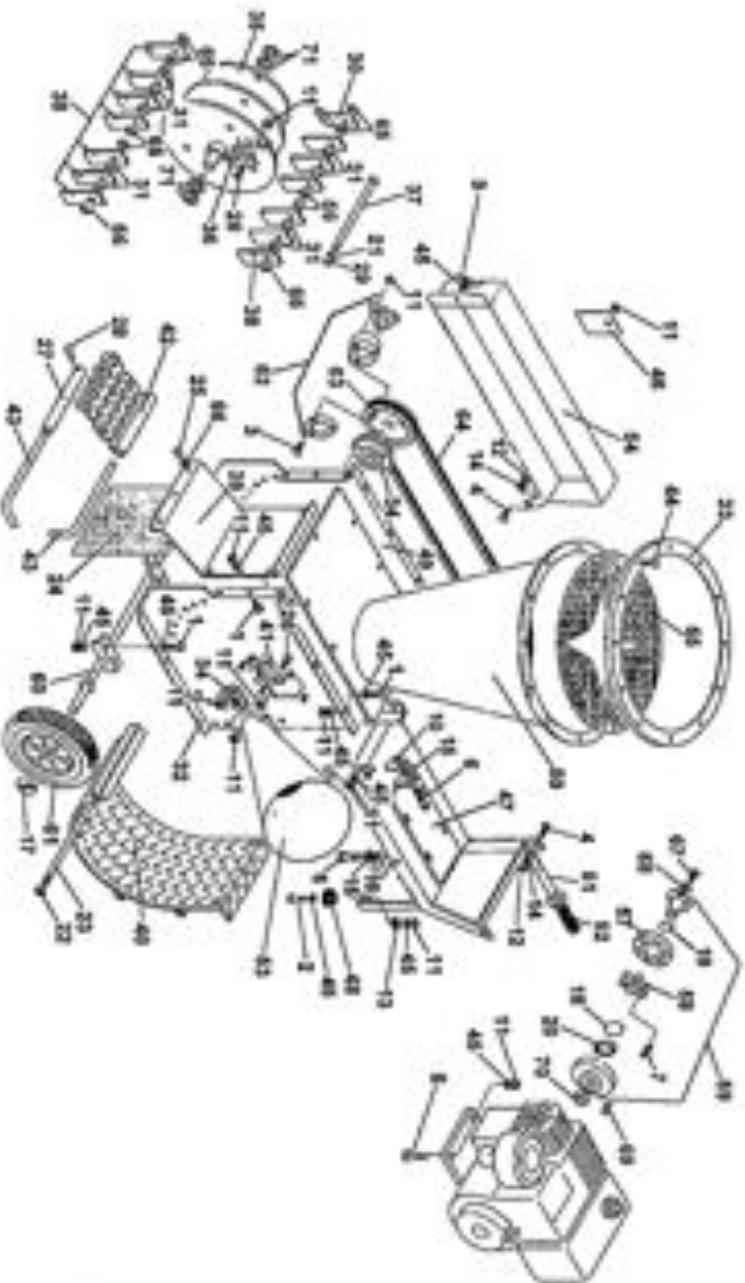


ID	PART NO	QTY	DESCRIPTION	ID	PART NO	QTY	DESCRIPTION
1	311.12150	1	SCREW, M6X20	38	581.27460	1	BLADE "
2	311.12153	1	SCREW, M4X20	37	581.27461	1	BLADE HAMMER W/SHARP REND "
3	311.12157	1	SCREW, M6X20	38	581.27462	1	KNIVES "
4	311.12211	1	SCREW, M6X20	39	581.27470	1	DEFLECTOR, DISCHARGE "
5	311.12268	1	SCREW, M12X1.25	40	581.27471	1	PANEL, BOTTOM "
6	311.12795	1	SCREW M8X1.25X40	41	581.27474	1	BLADE STATIONARY "
7	311.32060	1	SCREW, M6X20	42	581.27475	1	SCREWS "
8	311.32063	1	SCREW, M6X20	43	581.27476	1	PRO "
9	312.02501	1	"W" NUT	44	581.27479	1	SUSI.W.4M-30X18
10	312.11120	1	NUT, M12	45	581.27484	1	WASHER,
11	312.41080	1	NUT, SELF LOCKING, M8	46	581.27496	1	PLATE
12	312.41100	1	NUT, SELF LOCKING	47	581.58201R	1	ENGINE PLATE
13	314.11090	1	WASHER, FLAT, M8.4	48	581.58225R	1	RUBBER FOOT
14	314.11100	1	WASHER	49	581.58251	1	LEFT SIDE WALL
15	314.11130	1	WASHER, FLAT, M12	50	581.58252	1	HOPPER
16	314.20180	1	WASHER, LOCK, M12	51	581.58253R	1	HANDLE STEM
17	342.46061	1	CLUTCH PIN	52	581.58259	1	HANDLE KNOB
18	321.11062	1	CIRCLIP, LARGE, CLUTCH	53	581.58267	1	DISPENSER, HOPPER
19	351.11055	1	CIRCLIP, CLUTCH	54	581.58259	1	BELT, CHAINCASE
20	371.12325	1	BEARING, MEDIUM, M4, CLUTCH	55	581.58269	1	HOPPER SLAP
21	580.44897	1	WASHER	56	581.58270	1	SPACER
22	581.22427	1	NUT, M12	57	581.58263	1	CLUTCH BUSHING
23	581.22428	1	ROD	58	581.58268	1	STAR, CLUTCH
24	581.22431	1	SHIELD, "	59	581.58264	1	CLUTCH ASSEMBLY
25	581.22422	1	ROD, T, 4.50X15	60	581.58255	1	WHEEL SUPPORT
26	581.22423	1	COUNTER SUNK BOLT, M8X25	61	581.58256	1	WHEELS
27	581.22438	1	SLEEVE	62	581.58267	1	PULLEY ASSEMBLY
28	581.22439	1	COTTER PIN	63	581.58267R	1	PULLEY, PULLEY ONLY
29	581.22450	1	CIRCLIP	64	581.58258	1	BELL
30	581.22460	1	L BLADE "	65	581.58259	1	WASHER
31	581.22441	1	SPACER "	66	581.58270	1	WASHER
32	581.22453	1	RIGHT SIDE WALL	67	581.58271	1	SCREW
33	581.22740	1	DEFLECTOR, SUPPORT	68	581.58273	1	WASHER
34	581.22748	1	SUPPORT & BEARING "	69	581.58274	1	KEY
35	581.22749	1	DRUM	70	581.58275	1	SPACER
71	581.58277	1					~ THESE PARTS ARE INTERCHANGEABLE WITH THE GENERATION I PARTS

**Engine Driven  
Chipper Shredder  
Bio 100 Square Hopper**

**Serial Number Range**

**02.00**

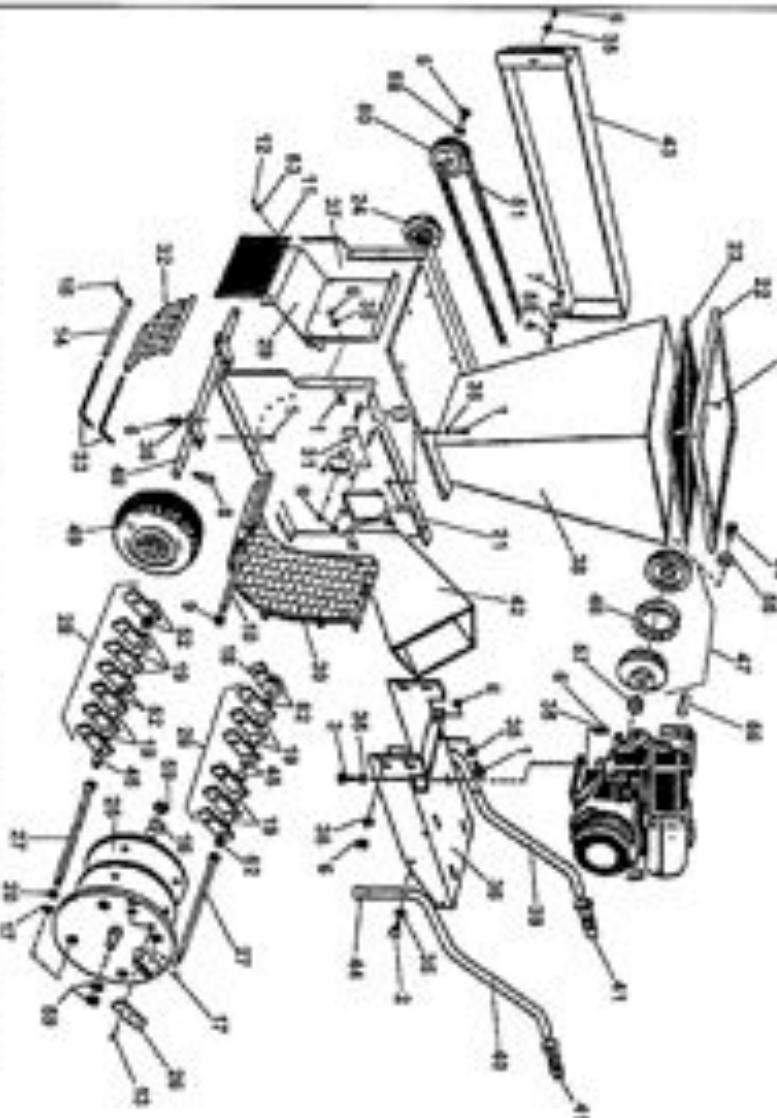


B	PART NO	QTY	DESCRIPTION	B	PART NO	QTY	DESCRIPTION
1	311.12150	1	SCREW, M8X20	21	581.27414	1	BLADE STATIONARY**
2	311.1215a	1	SCREW, M8X40	22	581.27475	1	SCREEN **
3	311.12161	1	SCREW, M8X60	23	581.27476	1	ROD **
4	311.12211	1	SCREW, M10X30	24	581.27479	1	SCREW, M8X30X18
5	311.12219	1	SCREW M10X625	25	581.27484	1	WASHER
6	312.41080	1	NUT, SELF LOCKING, M8	26	581.58290	1	ENGINE PLATE
7	312.41190	1	NUT, SELF LOCKING, M10	27	581.58291	1	LEFT SIDE WALL
8	580.02052	1	PIN **	28	581.58292	1	HOPPER
9	581.27427	1	NUT, M12	29	581.58293	1	RIGHT HANDLE STEM
10	581.27438	1	ROD	30	581.58294	1	LEFT HANDLE STEM
11	581.27431	1	SHIELD **	41	581.58295	1	HANDLE KNOB
12	581.27432	1	ROVET, 4.8X18	42	581.27451	1	CHEPPEL CHUTE, SQUARE
13	581.27433	1	COUNTER SUNK BOLT, M8X25	43	581.68269	1	BELT CRANKCASE
14	581.27436	1	SLEEVE	44	581.68281	1	RUBBER FOOT
15	581.27437	1	COTTER PIN	45	581.68286	1	SPACER
16	581.27438	1	KEY	46	581.58263	1	CLUTCH LINING
17	581.27439	1	CIRclip	47	581.68264	1	CLUTCH ASSEMBLY
18	581.27440	1	L BLADE **	48	581.68265	1	WHEEL SUPPORT
19	581.27441	1	SPACER **	49	581.68266	1	WHEELS
20	581.27442	1	SPACER	50	581.68267	1	PULLEY ASSEMBLY
21	581.27453	1	RIGHT SIDE WALL	51	581.68268	1	BELT
22	581.27454	1	DEFLECTOR SUPPORT **	52	581.68269	1	WASHER
23	581.27455	1	HOPPER PLATE **	53	581.68270	1	WASHER
24	581.27456	1	SUPPORT & BEARING **	54	581.68271	1	SCREW
25	581.27458	1	DRUM **	55	581.68273	1	WASHER
26	581.27460	1	BLADE **	56	581.58274	1	KEY
27	581.27461	1	SHAFT HAMMER WRENCH RING **	57	581.58275	1	SPACER
28	581.27462	1	KNIVES **	58	581.68276	1	WASHER
29	581.27470	1	DEFLECTOR, DISCHARGE **	59	581.68277	1	SPACER
30	581.27471	1	PANEL BOTTOM **				** THESE PARTS ARE INTERCHANGEABLE WITH THE GENERATION I UNITS

**Chipper  
Shredder**

**Generation II  
Chipper Unit**

**Serial Number Range  
915694 +**

**04.00**

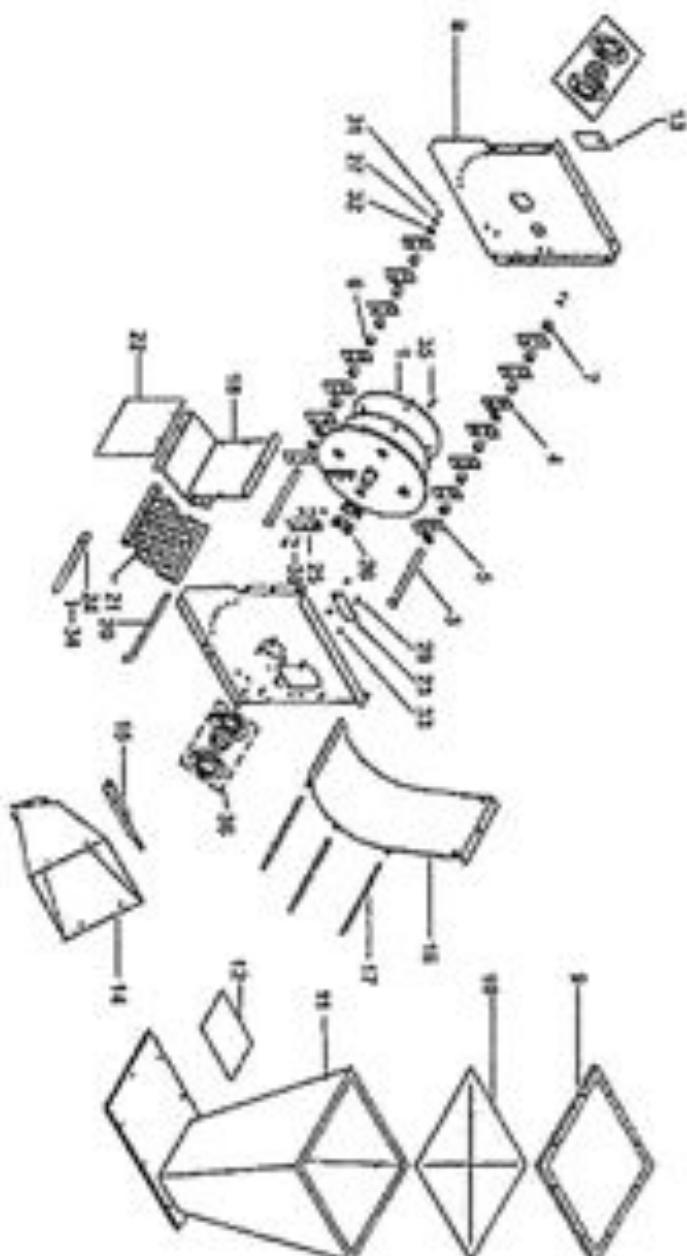


ID	PART NO	QTY	DESCRIPTION	ID	PART NO	QTY	DESCRIPTION
1	0190101000	1	ROTOR	21	0128000000	1	SCREEN
2	0190101001	1	ROTOR COMPLETE	22	0128000000	1	SHIELD
3	0190102000	4	SHAFT, HAMMER	23	0130000000	1	BLADE, STATIONARY
4	0190103000	28	HAMMER, STRAIGHT	24	0138000000	5	SLEEVE
5	0190104000	2	HAMMER, L-SHAPED	25	0138000000	1	BLADE
6	0190105000	95	SPACER	26	0211000022		
7	0190106001	12	SPACER	27	0500000016	4	SIM
8	0190141000	1	PANEL	28	2500000000	1	
9	0190000000	1	DEFLECTOR SUPPORT	29	500011006	2	BOLT
10	0190000000	1	HOPPERFLAP	30	500012006	3	BOLT
11	0190004000	1	HOPPER	31	510012000	4	GROUP
12	0108510000	1	DECAL	32	5111200020	92	WASHER
13	0115300000	1		33	5200002024	3+2	NUT
14	0115000000	1	CHIPPER CHUTE	34	5300003000	5	COTTER PIN
15	0116000051	1	SUPPORT PLATE, CHUTE	35	530004000	1	KEY
16	0120000000	1	PANEL, BOTTOM	36	5400002030	2	BEARING ASSEMBLY
17	0121000000	3	SLEEVE				
18	0122000000	1	DISCHARGE DEFLECTOR				
19	0125000001	1	PANEL				
20	0127000000	5	ROD				

Engine Driven  
Chipper Shredder

Generation II  
Engine Drive Honda

Serial Number Range  
ALL MODELS HONDA ENGINE POWERED

**05.00**

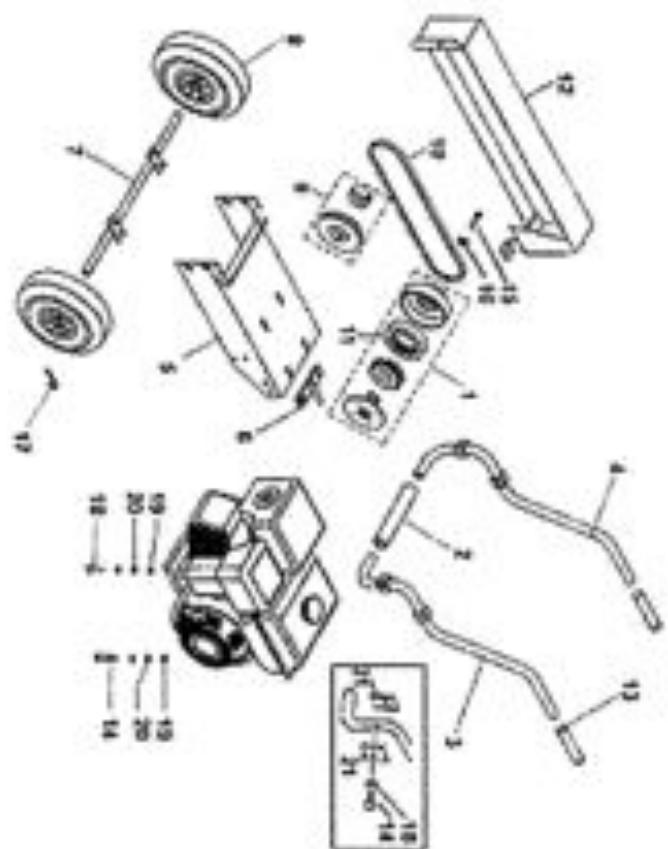

ID	PART NO	QTY	DESCRIPTION	ID	PART NO	QTY	DESCRIPTION
1	0138600000	1	CLUTCH COMPLETE	16	510950843	1	WASHER:
2	013900001	1	RUBBER HOSE	17	520001000	4	LYNCH PIN
3	0142388232	1	HANDLE BAR LH	18	520062610	2	BOLT M10X50 HONDA
4	014398639	1	HANDLE BAR RH	19	520007010	4	BLOCK M10 HONDA
5	014550001	1	DECK, ENGINE SUPPORT HONDA	20	530011600	6	WASHER M10 HONDA
6	014650008	1	BELT TENSIONER				
7	014680000	1	AXLE, WHEEL				
8	014700000	2	WHEEL				
9	014850000	1	PULLEY W/TAPER LOCK				
10	014920008	1	BELT, HONDA	21	013980003	3	BLOCK
11	019486000	1	CLUTCH RUBBER, STAR				
12	019786003	1	BELT SHIELD HONDA				
13	0200025000	2	HANDLE GRIP				
14	5000001000	2	BOLT M10X50 HONDA,				
15	507160134	1	BOLT 7/16X 1.5" UNF HONDA				


PLEASE NOTE THAT REF# 21 WAS ONLY USED ON A FEW EARLY UNITS. AFTER THAT REF# 621 WAS WELDED TO THE INDIVIDUAL HANDLEBARS.

**Engine Driven  
Chipper Shredder**

**Generation II  
Engine Drive Intek**

**Serial Number Range**  
All S/Ns End in 06.00

**06.00**

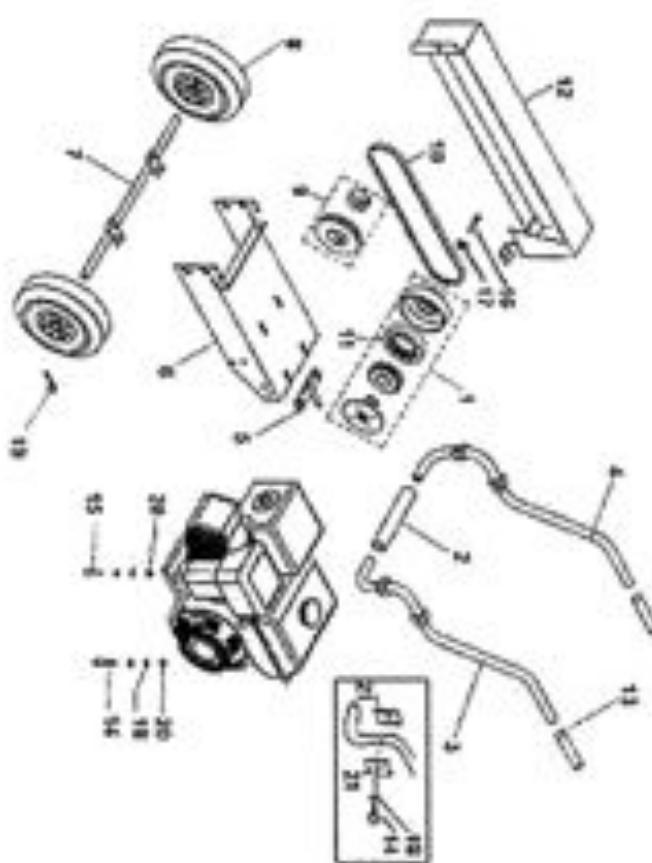


ID	PART NO	QTY	DESCRIPTION	ID	PART NO	QTY	DESCRIPTION
1	013800000	1	CLUTCH COMPLETE	16	6038800152	1	BOLT 1/4 X 1.5 UNF, B/S
2	013800001	1	RUBBER HOSE	17	6100550453	1	WASHER
3	0143600152	1	HANDLE BARREL	18	314.11099	6	WASHER M8
4	0143600153	1	HANDLE BARREL	19	520001003	4	LYNCH PIN
5	014500002	1	BELT TENSIONER	20	620052005	4	BLOCK B/S
6	014500011	1	DECK, ENGINE SUPPORT B/S				
7	014650006	1	AXLE, WHEEL				
8	014700005	2	WHEEL				
9	014850006	1	PULLEY/WASHER LOCK				
10	014900032	1	BELT BASE	21	61388008	8	BLOCK
11	019400006	1	CLUTCH RUBBER, STAR				
12	019700001	1	BELT SHIELD B/S				
13	020000006	2	HANDLE GRIP				
14	603607000	6	BOLT M8X0.75 B/S				
15	601840015	2	BOLT M8X0.75 B/S				

PLEASE NOTE THAT REF# 21 WAS ONLY USED ON A FEW EARLY UNITS. AFTER THAT REF# 621 WAS WELDED TO THE INDIVIDUAL HANDLEBARS.

**Bio 100 Attachment  
Square Hoppers**

**Bio 100 Attachment**      **Serial Number Range**  
**Square Hoppers**            All Attach., Square Hoppers      **01.00**

**Serial Number Range**

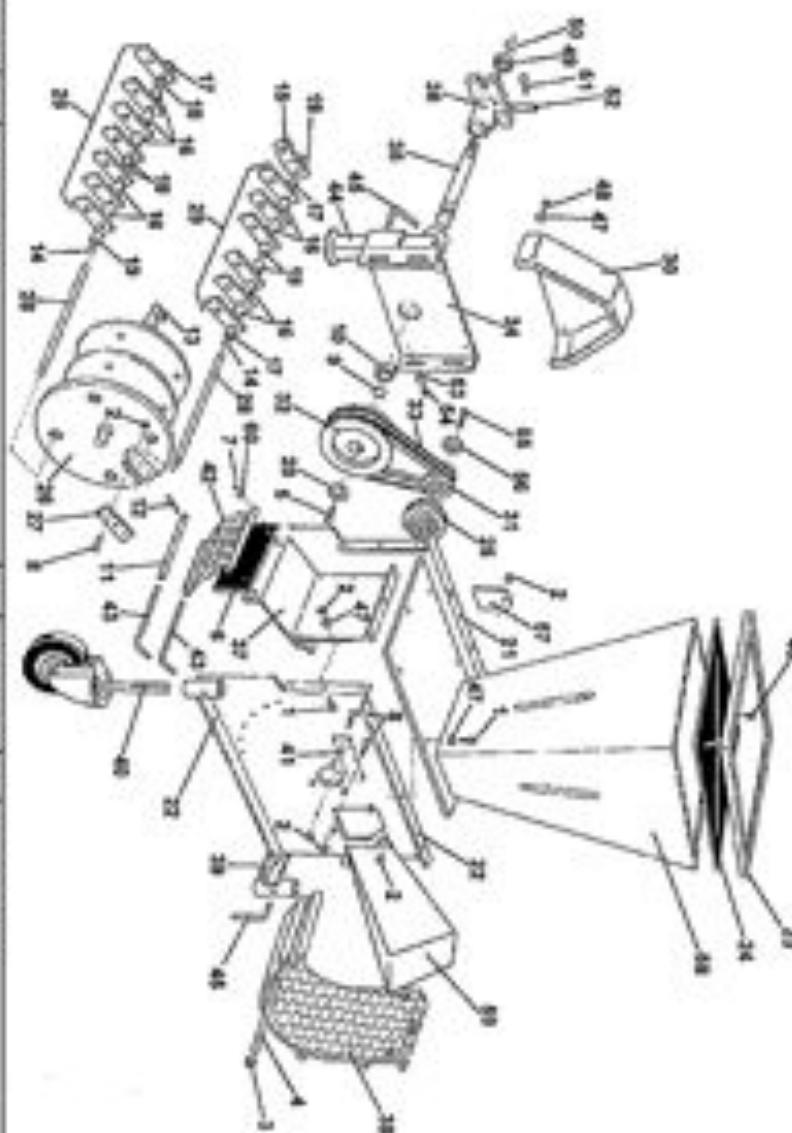


ID	part no	description	ID	part no	description
1	311-12150	SCREW, M8X20	31	591-27464	PULLEY ** <small>** THESE PARTS ARE INTERCHANGEABLE WITH THE GENERATION 8 UNITS</small>
2	312-41086	NUT, SELF LOCKING, M8	32	691-27465	PULLEY **
3	581-27427	NUT, M12	33	591-27466	BELT
4	581-27428	ROD	34	591-27467	REAR SUPPORT **
5	581-27430	SCREW, M8X20	35	591-27468	DRIVE SHAFT FOR SPLINE DOME
6	581-27431	SHIELD **	36	591-27469	SUPPORT **
7	581-27432	ROVET, 4 BX 1/8	37	591-27470	DEFLECTOR, DISCHARGE **
8	581-27433	COUNTER SUNK BOLT, M8X25	38	591-27471	PANEL, BOTTOM **
9	581-27434	CIRCLIP	39	591-27472	SUPPORT
10	581-27435	BEARING	40	591-27473	WHEEL ASSEMBLY
11	581-27436	SLEEVE	41	591-27474	BLADE STATIONARY **
12	581-27437	COTTER PIN	42	591-27475	SCREEN **
13	581-27438	KEY	43	591-27476	ROD **
14	581-27439	CIRCLIP	44	591-27477	STAND **
15	581-27440	L BLADE **	45	591-27478	ADJUSTING SCREW **
16	581-27441	SPACER **	46	591-27479	SCREW M6X 3X 1/8
17	581-27442	SPACER	47	591-27484	WASHER
18	581-27443	SPACER	48	591-27485	SCREW M8X 1/8
19	581-27444	SPACER	49	591-27487	BEARING
20	581-27447	WASHER **	50	591-27488	CIRCLIP
21	581-27452	PANEL	51	691-27489	COTTER PIN
22	691-27453	RIGHT SIDE WALL	52	691-27490	PIN **
23	581-27454	DEFLECTOR SUPPORT **	53	691-27491	WASHER
24	691-27455	HOPPER FLAP **	54	691-27492	SCREW M10X5
25	581-27458	SUPPORT & BEARING **	55	691-27493	SCREW M10X5
26	691-27459	DRUM **	56	691-27494	WASHER
27	581-27460	BLADE **	57	691-27495	PLATE
28	691-27461	SHAFT HAMMER W/ENCLP RING **	58	691-27497	HOPPER
29	591-27462	KNOBES **	59	591-27491	CHOPPER CHUTE, SQUARE
30	581-27463	BELT COVER **	60	691-27470	WASHER
51	581-27471	DRIVE SHAFTE FOR 100000000			

**Chipper  
Shredder**

**Bio 100 Attachment  
Round Hoppers**

**Serial Number Range  
All Attach, Round Hoppers**

**02.00**

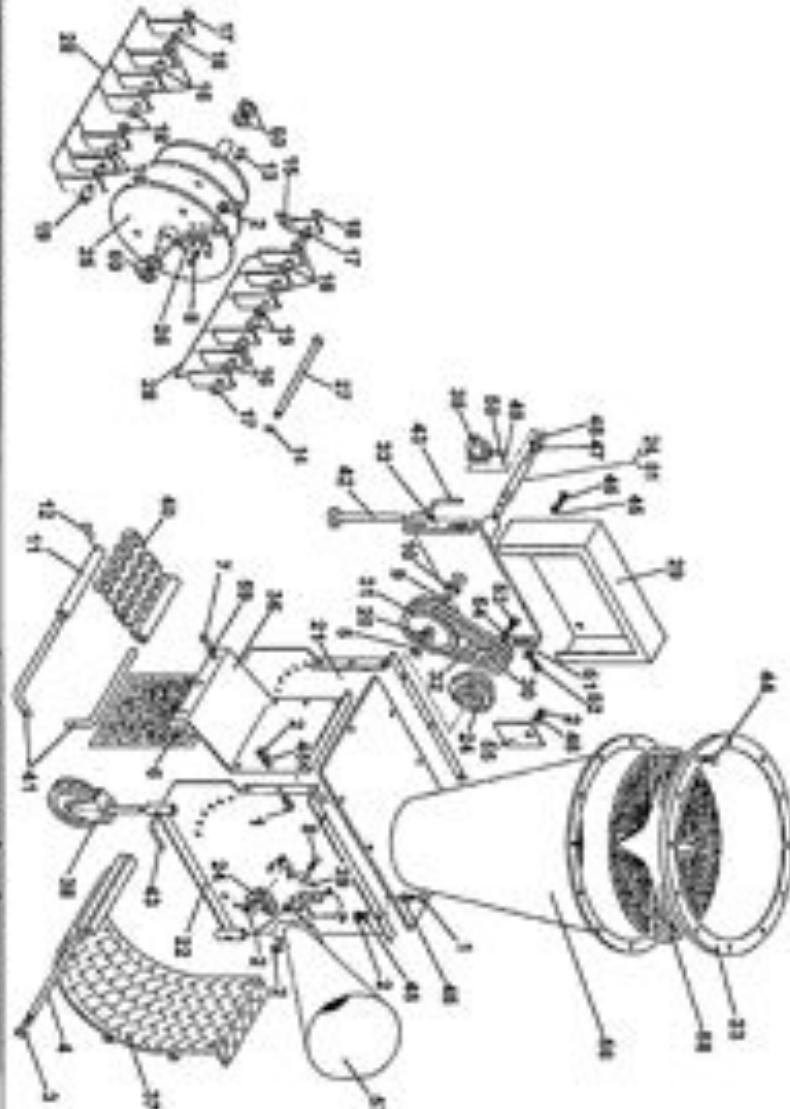


D	PART NO	QTY	DESCRIPTION	D	PART NO	QTY	DESCRIPTION
1	311.12150	1	SCREW, M8X20	31	681.27465	1	PULLEY "
2	312.41060	1	NUT, SELF LOCKING, M8	32	681.27466	1	BELT
3	681.27427	1	NUT, M12	33	681.27467	1	REAR SUPPORT "A" ASSEMBLY
4	681.27428	1	ROD	34	681.27468	1	DRIVE SHAFT SUPPORT "
5	681.27430	1	SCREW, M6X20	35	681.27469	1	SHIELD "
6	681.27431	1	ROD	36	681.27470	1	DEFLECTOR, DISCHARGE "
7	681.27432	1	REVT, 4.8X16	37	681.27471	1	PANEL, BOTTOM "
8	681.27433	1	COUNTER SUNK BOLT, M8	38	681.27472	1	WHEEL ASSEMBLY
9	681.27434	1	CIRCLIP	39	681.27474	1	BLADE, STATIONARY "
10	681.27435	1	BEARING	40	681.27475	1	SCREEN "
11	681.27436	1	SLEENE	41	681.27476	1	ROD "
12	681.27437	1	COTTER PIN	42	681.27477	1	STAND "
13	681.27438	1	KEY	43	681.27478	1	ADJUSTING SCREW "
14	681.27439	1	CIRCLIP	44	681.27479	1	SCREW, M8.3X15
15	681.27440	1	L BLADE "	45	681.27484	1	WASHER
16	681.27441	1	SPACER "	46	681.27485	1	SCREW, M8X15
17	681.27442	1	SPACER	47	681.27487	1	BEARING
18	681.27443	1	SPACER	48	681.27488	1	CIRCLIP
19	681.27444	1	SPACER	49	681.27489	1	COTTER PIN
20	681.27447	1	WASHER "	50	681.27490	1	PIN "
21	681.27452	1	PANEL	51	681.27491	1	WASHER
22	681.27453	1	RIGHT SIDE WALL	52	681.27492	1	SCREW, M10X25
23	681.27454	1	DEFLECTOR SUPPORT	53	681.27493	1	SCREW, M10X30
24	681.27458	1	SUPPORT & BEARING "	54	681.27494	1	WASHER
25	681.27459	1	DRUM "	55	681.27495	1	PLATE
26	681.27460	1	BLADE "	56	681.27496	1	HOPPER
27	681.27461	1	SHAFT HAMMER WASHER RING "	57	681.27497	1	CHOPPER CHUTE
28	681.27462	1	KNIVES "	58	681.27498	1	HOPPER FLAP
29	681.27463	1	BELT COVER "	59	681.27499	1	SHAM
30	681.27464	1	PULLEY "	60	681.27500	1	WASHER

Chipper  
Shredder

Generation II  
PTO Drive

Serial Number Range 03.00  
915694 +

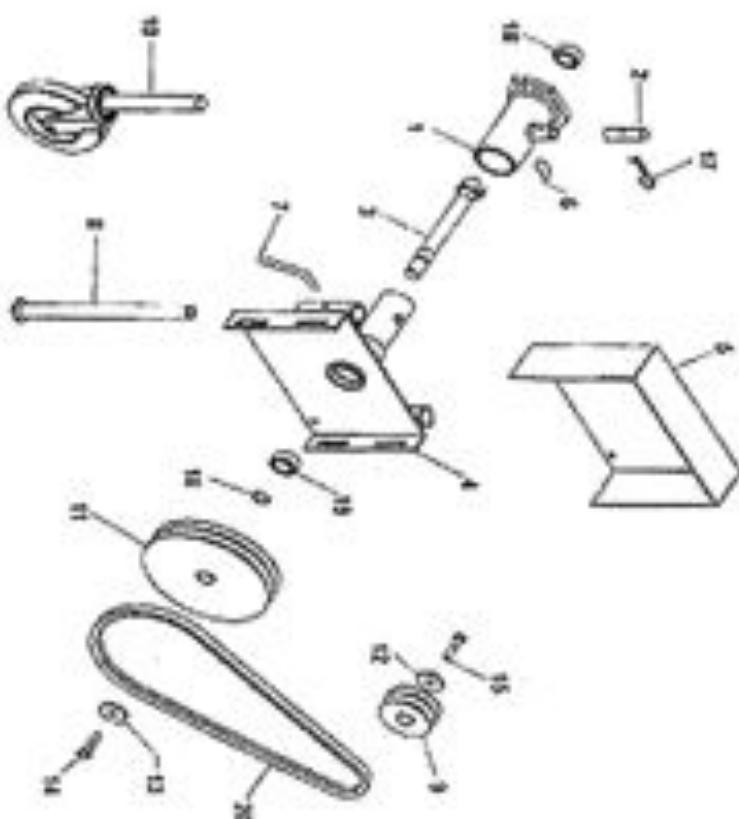

ID	PART NO	QTY	DESCRIPTION	ID	PART NO	QTY	DESCRIPTION
1	0102010000	1	PTO ADAPTER FLANGE	11	0131000000	1	PULLEY
2	0102020000	1	PIN	12	0135000000	1	WASHER
3	0102030000	1	PTO DRIVE SHAFT 3 DOG	13	0136000000	1	WASHER
4	0102040000	1	ADAPTER PLATE	14	5000010010	1	BOLT
5	0107000000	1	SHEILD	15	6000012008	1	BOLT
6	0108000000	1	DECAL	16	5100110000	1	SNAP RING
7	0110000000	4	LOCKING HANDLE	17	5300010000	1	LYNC PIN
8	0111000000	2	STABILIZER LEG	18	5400010000	1	BEARING
9	0120000000	1	PULLEY	19	5400020000	1	BEARING
10	0120000000	2	CASTER WHEEL ASSEMBLY	20	6200000004	2	BELT

# OPERATING INSTRUCTIONS

1. READ SAFETY RULES AND OPERATING INSTRUCTIONS BEFORE STARTING UNIT.
2. KEEP HANDS, FACE, CLOTHING, CHILDREN AND PETS AWAY FROM INJURE HAZARD. DISCOURAGE AFTER AND MOVING PARTS.
3. USE APPROVED SAFETY GLASSES AND GLOVES. AVOID WEARING LOOSE/FITTING CLOTHING.
4. IF UNIT JAMS, TURN POWER OFF. DISCONNECT SPARK PLUG, WAIT AND MAKE SURE ALL MOVING PARTS HAVE COME TO A COMPLETE STOP. USE ONLY A WOODEN STICK TO CLEAR.
5. KEEP ALL SHIELDS IN PLACE.
6. DO NOT USE HANDS TO CLEAN DISCHARGE OR HOT. • INSTALL MODEL SECURELY AGAINST THE SURFACE WHILE OPERATING.
7. DO NOT OPERATE ON LIME, ICE, GURGUL, OR PAVED OR GRANITE SURFACE.
8. DO NOT OPERATE GAS UNIT IN UNCLOSED AREA.
9. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY.





**A DANGER**  
ROTATING CHIPPER  
BLADE CAN CAUSE  
SERIOUS PERSONAL  
INJURY. DO NOT  
OPERATE UNLESS  
CHIPPER CHUTE IS  
BOLTED IN PLACE.



3"

MAXIMUM  
ALLOWABLE  
CHIPPING  
DIAMETER:

Chipper Shredder Decal Sheet Part 2  
581.27445

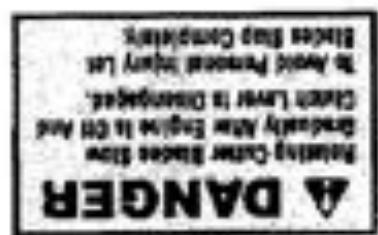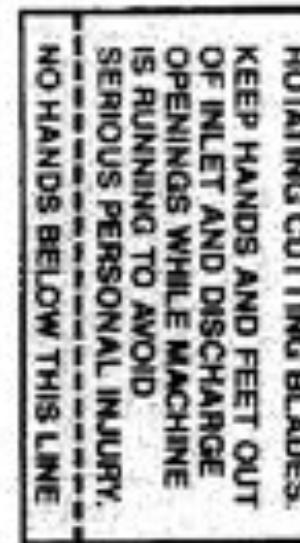

MADE IN ITALY

BCS America LLC.  
8111 NE Columbia Blvd.  
Portland, OR. 97218