



	SERVICE INFORMATION	1-7
---	--------------------------------	------------

Subject: Serial Number Location


The following illustrates the location of the serial number for the BCS two wheel tractors and BCS and Acme engines.

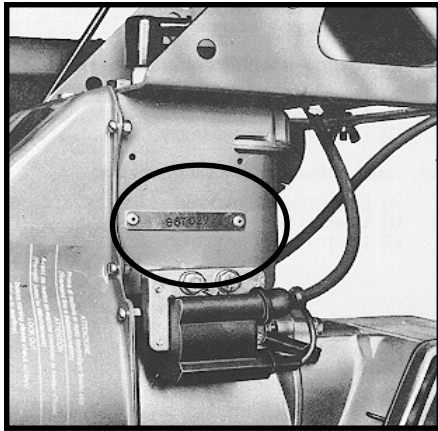


BCS Engine - Riveted Plate
 Located On The Left Hand Side Above Coil

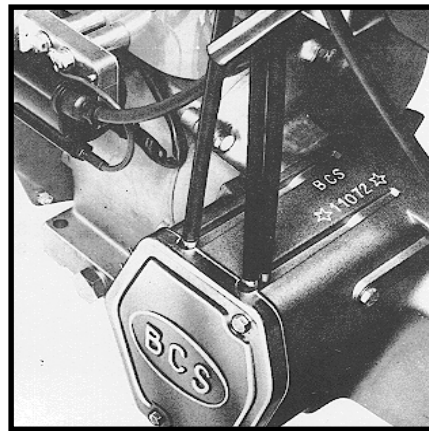

200 Series - Cast Into Transmission Housing
 Located Just To The Right Of The Drive Cables

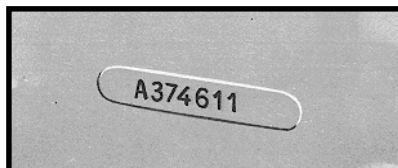

Acme Engines - Cast Into Block
 Located On Right Hand Side Of Block When Facing The Starter
 Serial Number Is Not On The Model Identification Plate

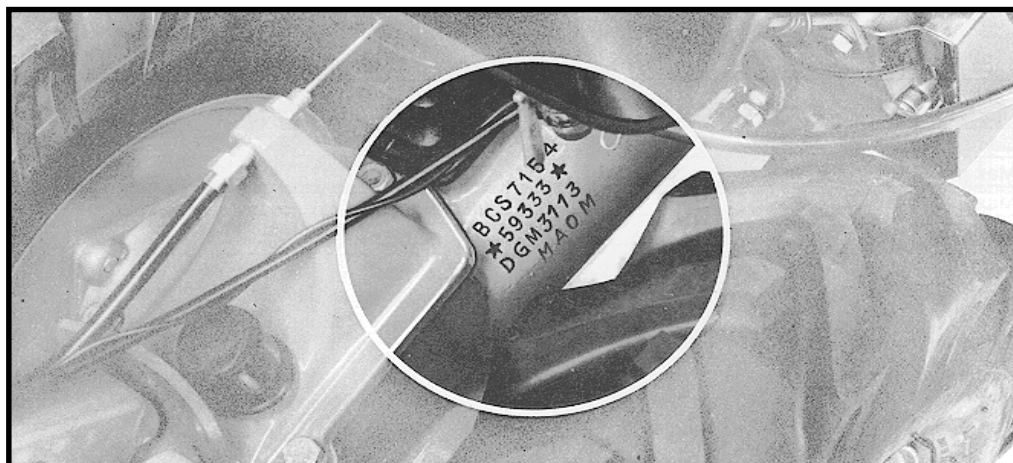

600, 700, 800 & 900 Series - Cast Into Transmission Housing - Serial Number Located Between The Two Stars Located On Right Side Of Transmission Just Below The Clutch Lever