



	<h1>SERVICE INFORMATION</h1>	<h1>1-7</h1>
---	----------------------------------	--------------

SERIAL NUMBER IDENTIFICATION


The following illustrates the location of the serial number for the BCS two wheel tractors and BCS and Acme engines.

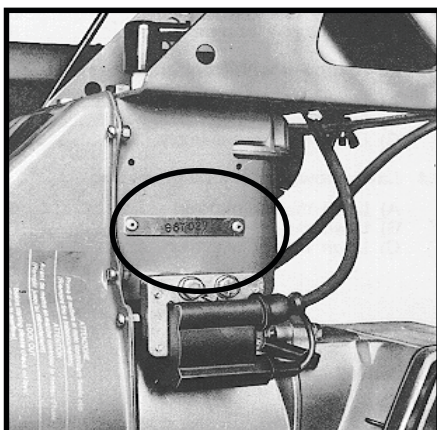


**BCS Engine - Riveted Plate Located On
The Left Hand Side Above Coil**

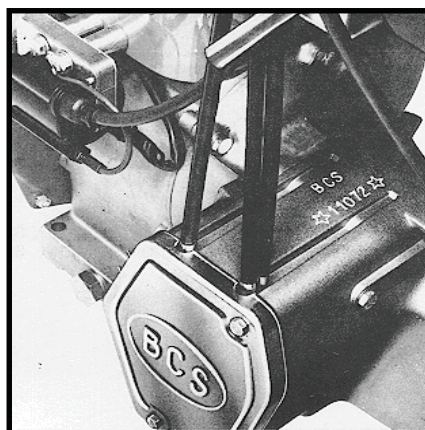

**200 Series - Cast Into Transmission Housing
Located Just To The Right Of The Drive Cables**

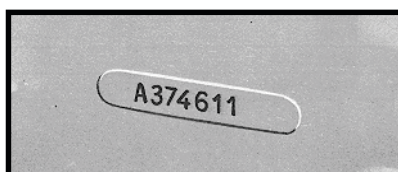

**Acme Engines - Cast Into Block
Located On Right Hand Side Of Block When Facing The Starter
Serial Number Is Not On The Model Identification Plate**

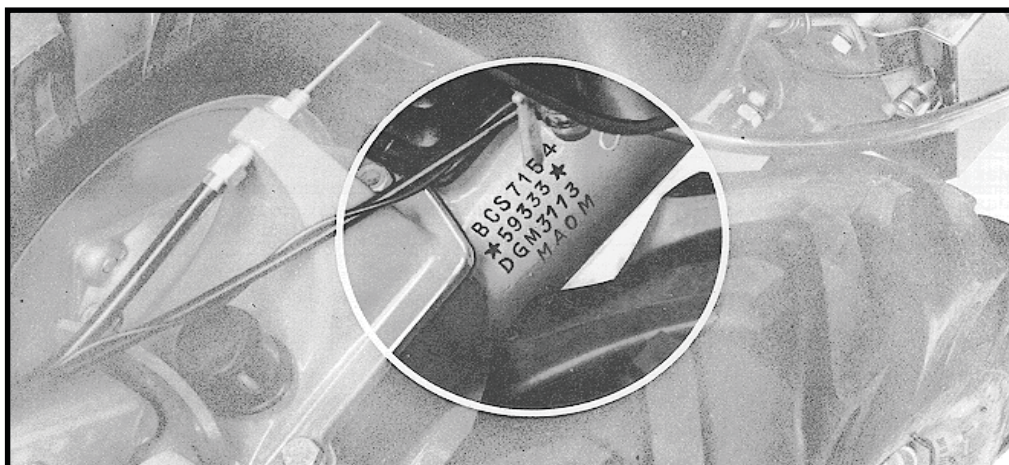

**600, 700, 800 & 900 Series - Cast Into Transmission Housing - Serial Number Located Between The
Two Stars Located On Right Side Of Transmission Just Below The Clutch Lever**